


SPORTSMAN SNOWMOBILE RACK - ICE AUGER PLACEMENT

- 1** Remove motor from auger, loosen adjustable rubber cover crossbars and place motor on to cross bars, adjust so motor is sitting firmly and stable. Then tighten rubber covered crossbars. Place rubber bungee straps(not supplied) so motor does not move.
- 2** Open latch on front auger holder by unscrewing lock knob, place auger into holder. Rotate auger so it is in desired position. Clearing front Linq bracket on Skidoo installations and centered on holders on all installations.
- 3** When in proper position. Secure auger to rear holder. In one of two ways. by drilling 1/4" hole through auger to line up with rear auger holder hole and placing 1/4" locking pin through auger and bracket. (recommended installation) or by wrapping rubber bungee strap around auger and securing to rack.

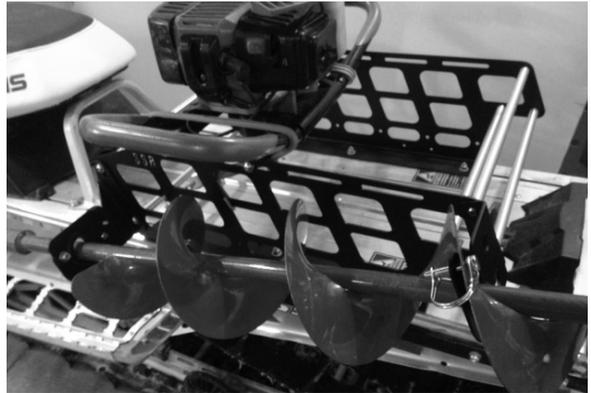

!WARNING! Always keep guard on auger cutting edge when on rack. Follow manufactures weight limits for cargo, Never overload Rack.



SPORTSMAN SNOWMOBILE RACK - ICE AUGER INSTALLATION

CONTENTS IN BOX: (1) FRONT LOCKING AUGER HOLDER, (1) REAR AUGER HOLDER (1) 1/4" SPRING LOCKING PIN. (2) 1/4" WASHERS

- 1 Remove front bolts from left side of rack and install front auger holder using the previously removed bolts and (2) 1/4" washers.
- 2 Remove the 2 rear bolts from left side of rack, install rear auger holder using previously removed bolts.

