

SPORTSMAN SNOWMOBILE RACK - ICE AUGER PLACEMENT

- 1** Remove motor from auger, loosen adjustable rubber cover crossbars and place motor on to cross bars, adjust so motor is sitting firmly and stable. Then tighten rubber covered crossbars. Place rubber bungee straps(not supplied) so motor does not move.
- 2** Open latch on front auger holder by unscrewing lock knob, place auger into holder. Rotate auger so it is in desired position. Clearing front Linq bracket on Skidoo installations and centered on holders on all installations.
- 3** When in proper position. Secure auger to rear holder In one of two ways. by drilling 1/4" hole through auger to line up with rear auger holder hole and placing 1/4" locking pin through auger and bracket. (recommended installation) or by wrapping rubber bungee strap around auger and securing to rack.

!WARNING! Always keep guard on auger cutting edge when on rack. Follow manufactures weight limits for cargo, Never overload Rack.





SSR - ICE AUGER INSTALLATION (TES & TLT MODELS)

CONTENTS IN BOX:

(4) 1/4" X 2" LONG ALLEN BOLTS

(2) 1/4" WASHERS

(4) SPACERS

(1) FRONT LOCKING LATCH AUGER HOLDER

(1) REAR AUGER HOLDER WITH 1/4" SPRING
LOCKING PIN

1 Remove the two lower front bolts from left side of rack. Install two 1/4" x 2" allen bolts with washers through front auger holder and spacers, thread into cross bars as shown. Tighten 1/4" bolts.

2 Remove the two rear bolts from left side of rack. Install two 1/4" x 2" allen bolts through rear auger holder and spacers, thread into cross bars as shown. Tighten 1/4" bolts.

